\bigcirc

0


Bolt

 \circ

Black Bolt


Steps:

- 1) Connect base to post, using bolt.
- 2) Route cord from table top through post and base.3) Connect table top to post with fixed brackets, using black bolts.

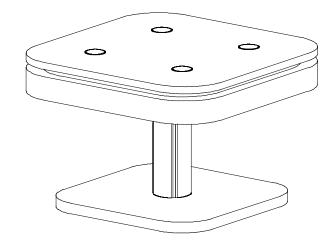

Completed Assembly



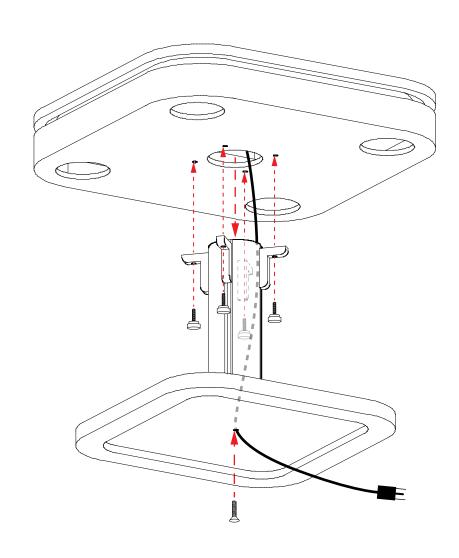

UNDERSIDE VIEW

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

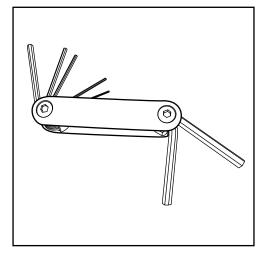

Hex Tool - Essential for Assembly

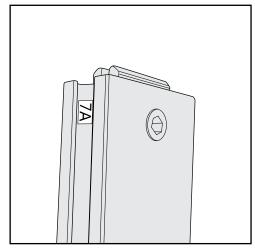


Part Identification - Numbering




DO NOT USE POWER TOOLS

MARNING

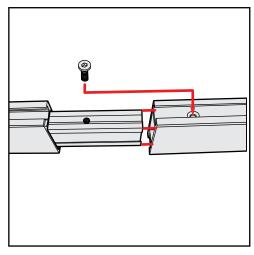


Spline Connection

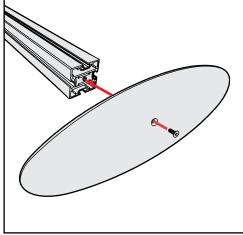


Base Plate & Extrusion Connection



LADDERS OR LIFTS MAY BE REQUIRED

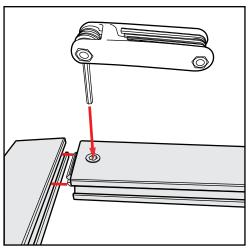

Extrusion & Lock Connection

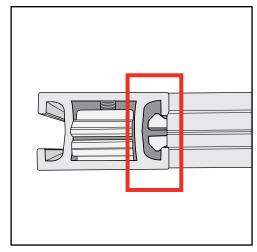

Engaged Lock



ALL CONNECTIONS MUST BE TIGHTLY SECURED



Retain all packing materials. **DO NOT DISCARD.**

CRATE PACKING

MOD-1455