




20'

10'

Plan View

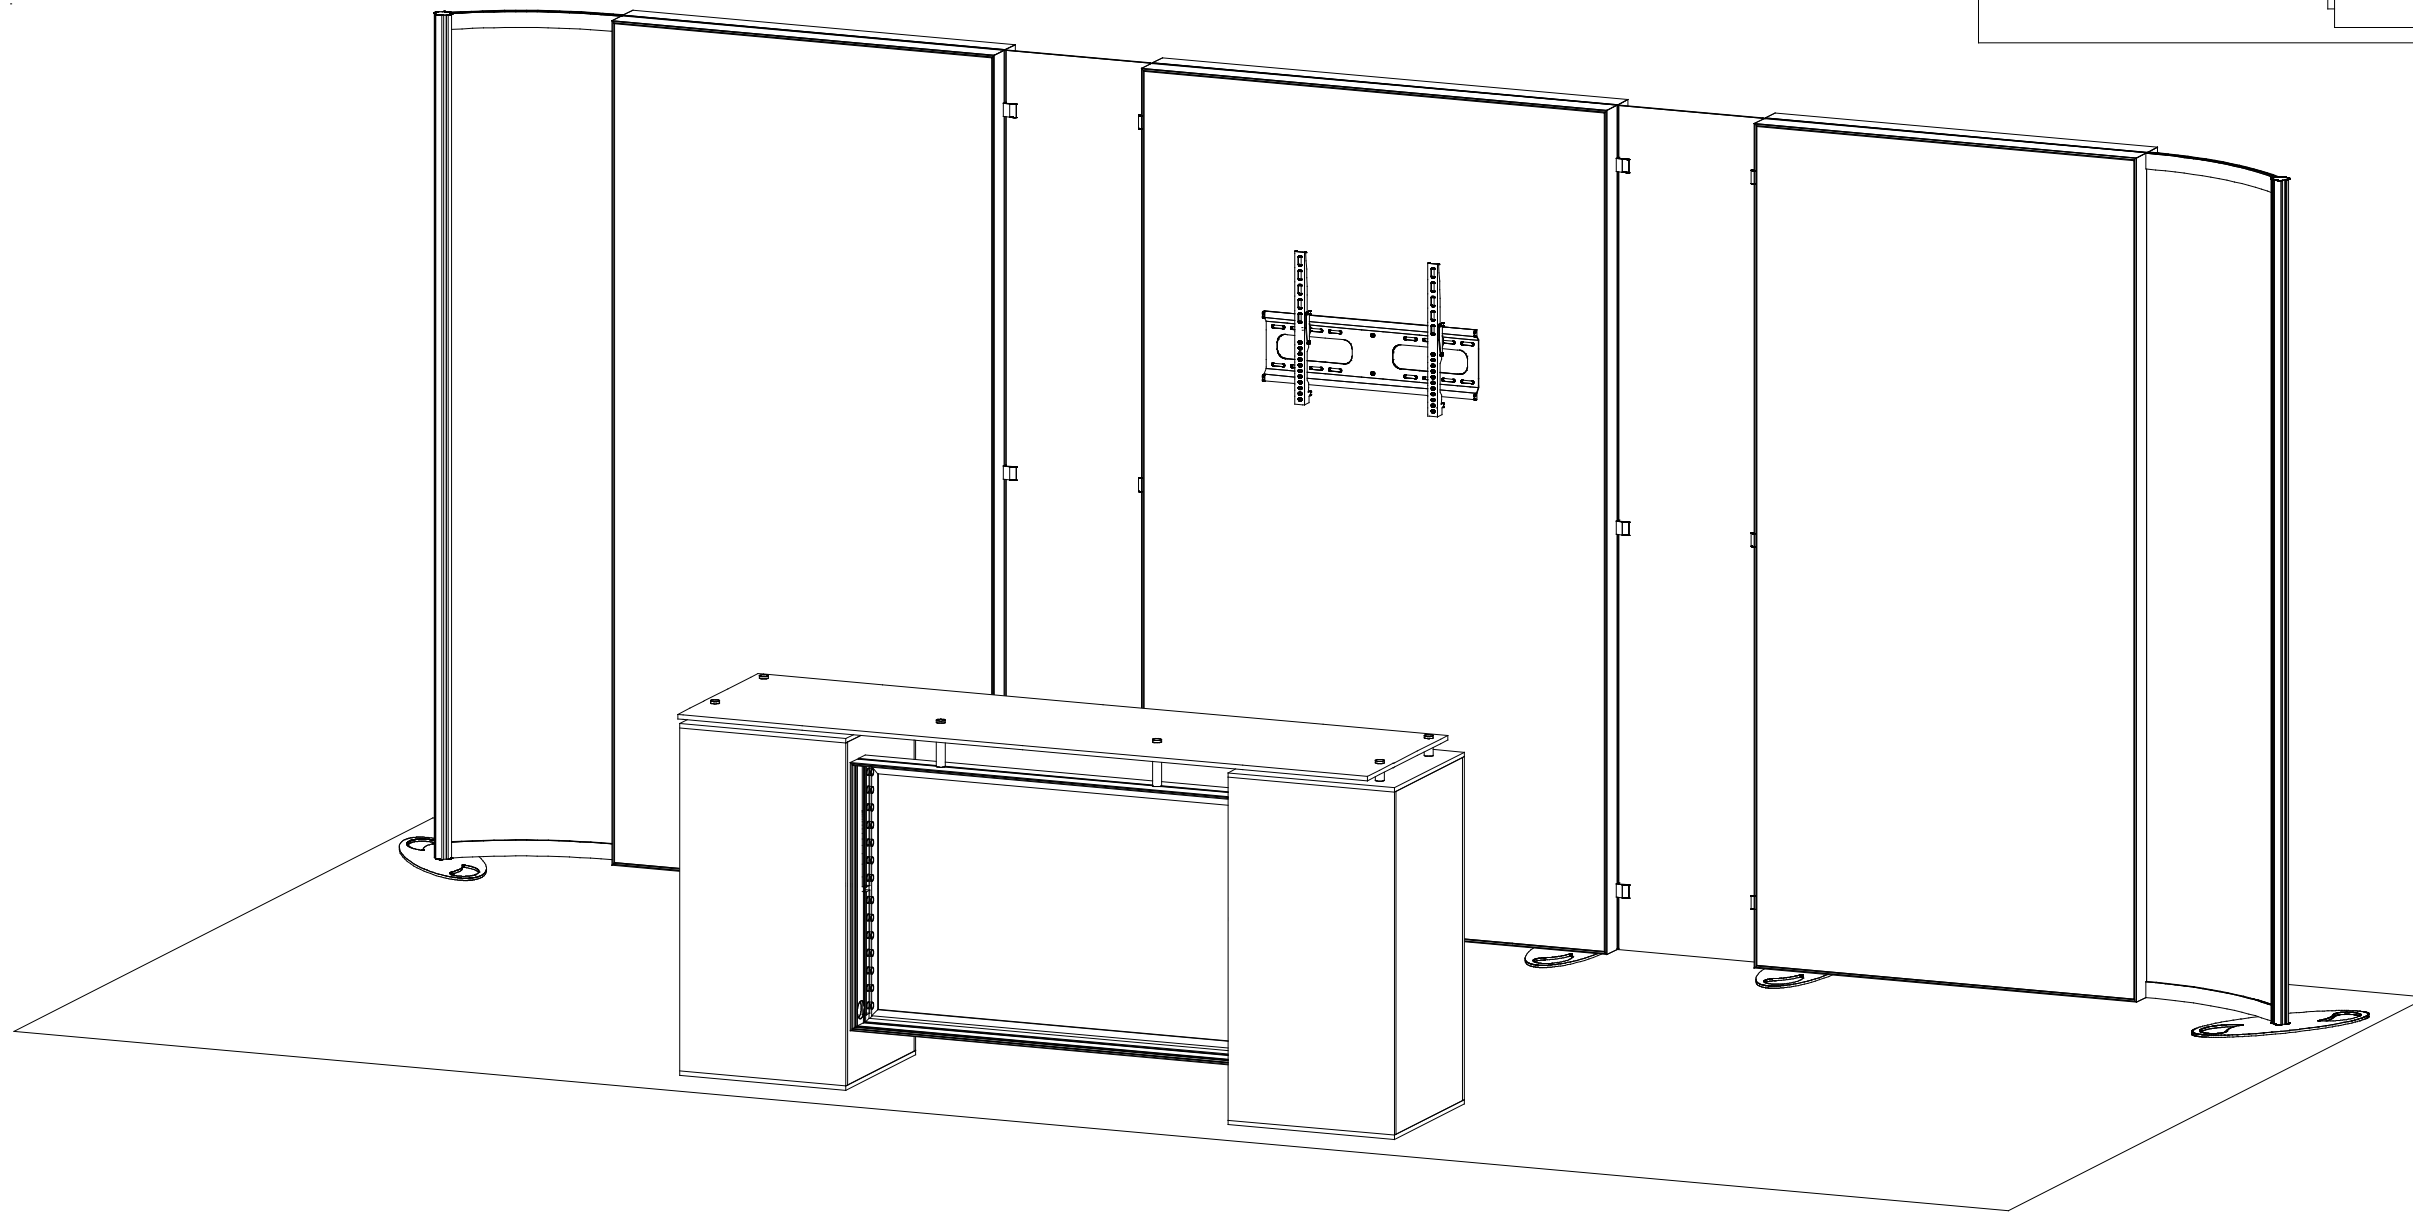

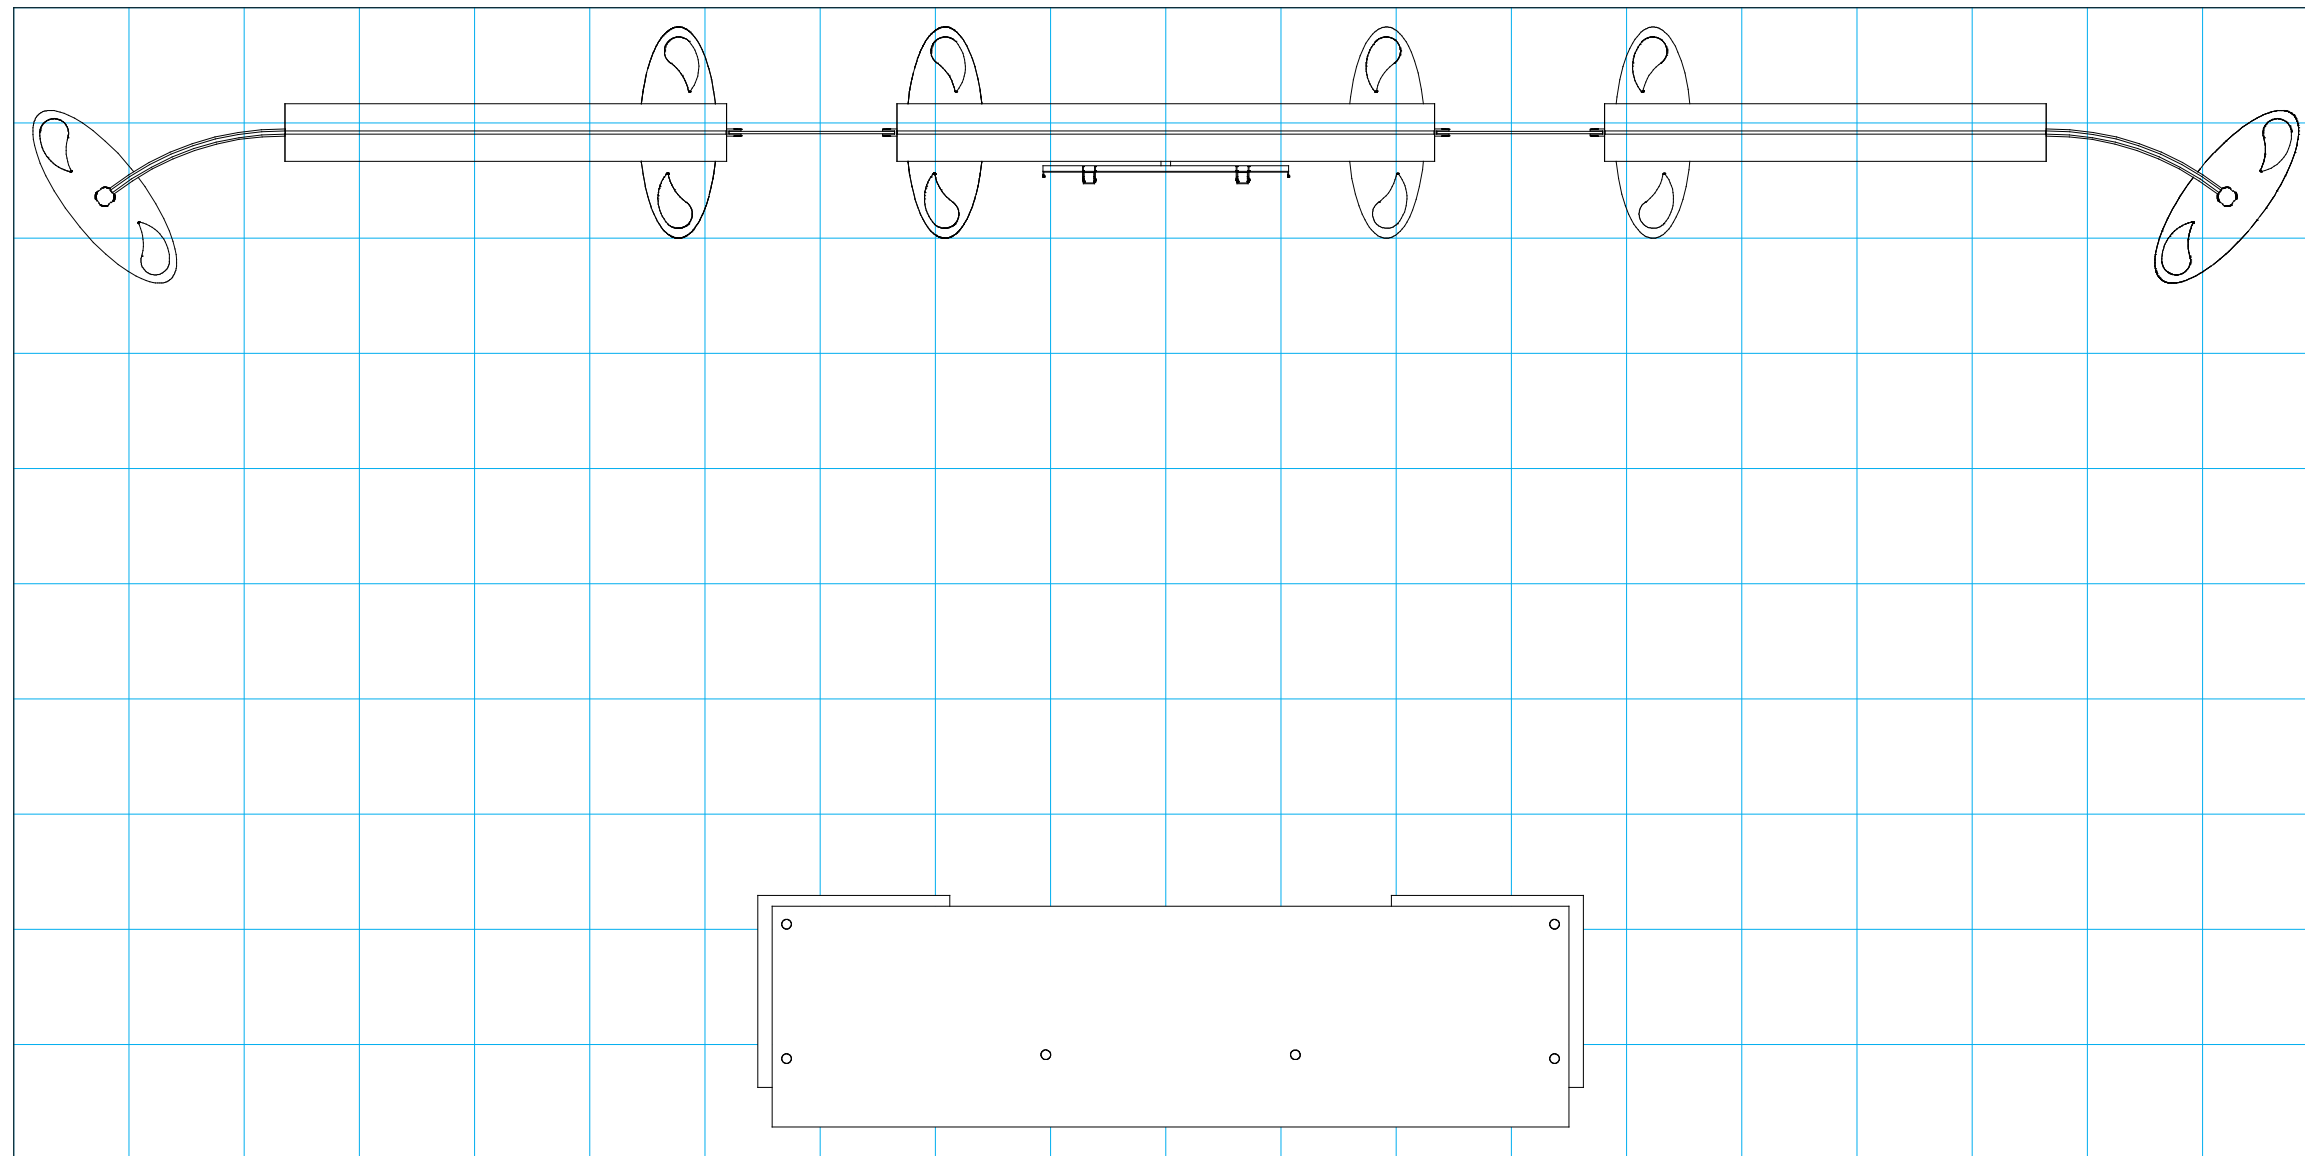

 = 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

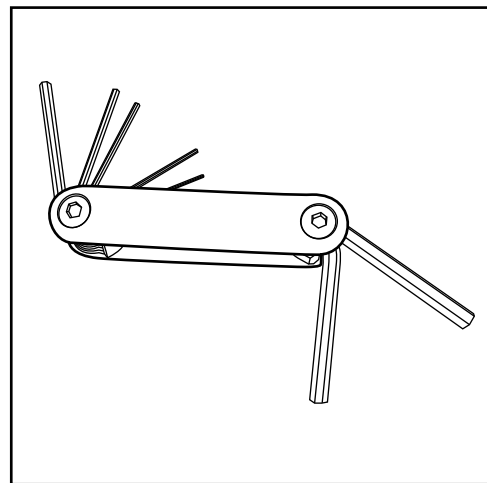


Hex Tool - Essential for Assembly

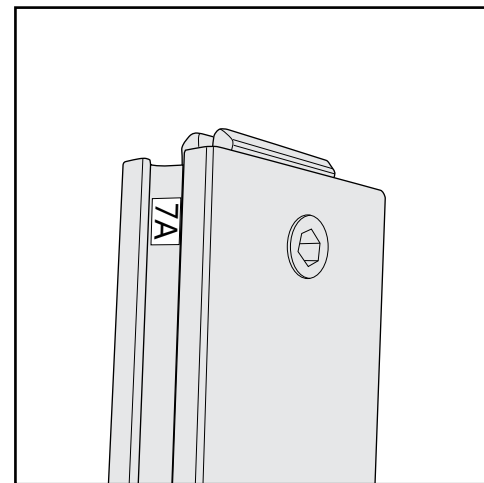


Part Identification - Numbering

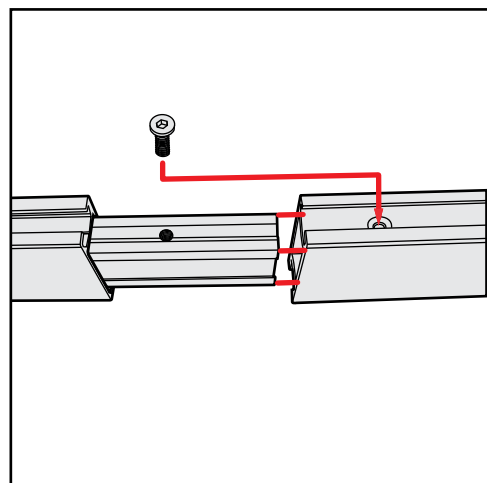


Spline Connection

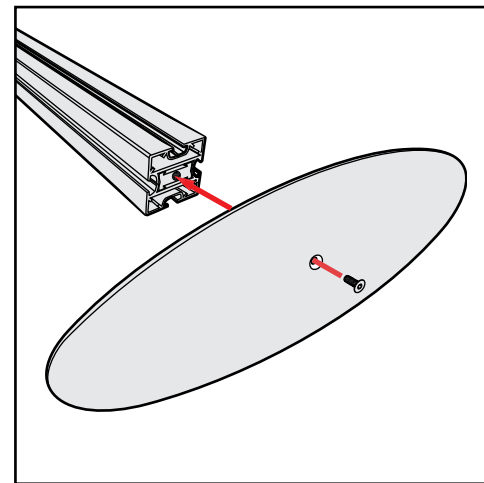

Base Plate & Extrusion Connection

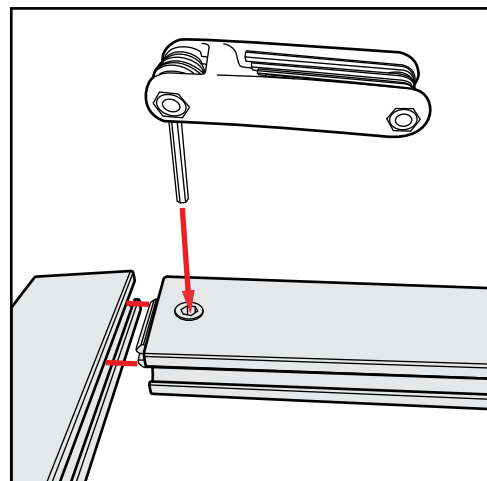

Extrusion & Lock Connection

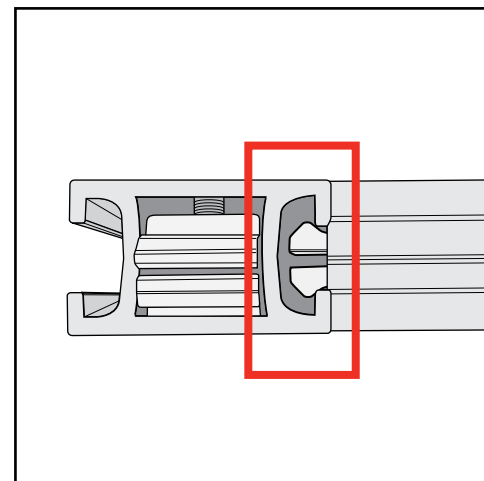

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED

euro lt | HYBRIDS


Using Your Setup Instructions

The Euro LT Hybrids Setup Instructions are created specifically for your configuration. They are laid out sequentially in levels, including exploded views, and a logical series of detailed steps to assemble the main structure and components. We encourage you to study the instructions **before** attempting to assemble your exhibit.


Each page reminds you to tighten the setscrews after disassembling your exhibit to prevent loss of the locks and setscrews (see below in RED). This is VERY IMPORTANT.

Cleaning and Packing Your Display


- 1) Use care when cleaning aluminum extrusion or acrylic inserts. Use only non-abrasive cleaners.
- 2) When cleaning laminate inserts, countertops, or panels use mild cleansers and a soft material such as cotton.
- 3) Keep all display components away from extreme heat and long exposure to sunlight to avoid warping and fading.
- 4) Retain all packing material. It will make re-packing much easier and will reduce the likelihood of shipping damage.

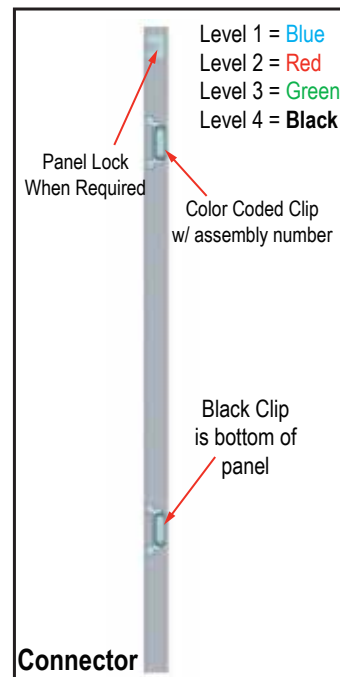


Each component has 2 clips, the lower clip is ALWAYS black. The top clip is color coded to distinguish which level. The color coded clip also contains the numbered label.

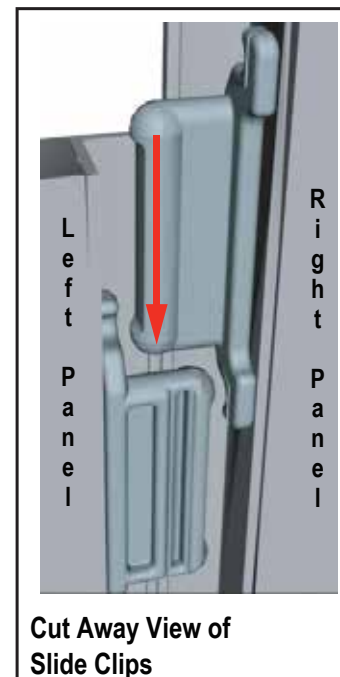

Components connect together by aligning them and sliding downward connecting clips together.

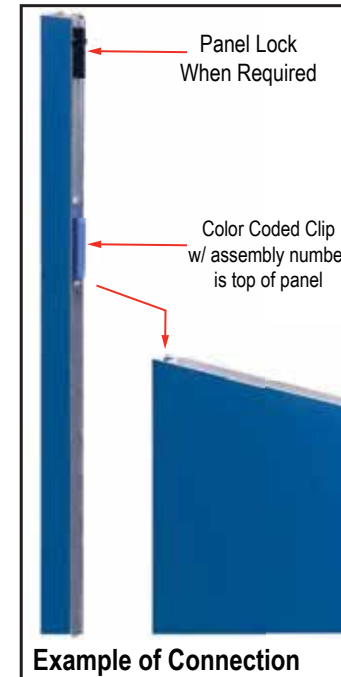

Configurations are assembled from left to right, usually starting with #1 and following the numbered sequence.

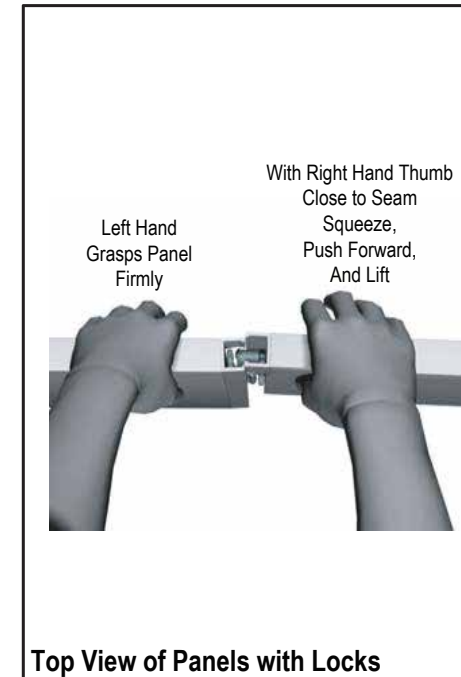

The first level of components contain panel locks that are located at the top of the panel for extra stability and seamless connection. When disassembling panels twist top connection slightly and lift right panel upward.


General Setup Instructions for Extrusion System



Most exhibits can be assembled with the supplied Hex Key Tool. Occasionally, a flat head screwdriver may be required.




Most horizontal extrusion connections have a patented expandable lock. This lock inserts into the groove of an opposing extrusion. Tightening the lock with the Hex Key Tool expands the lock and creates a strong positive connection.

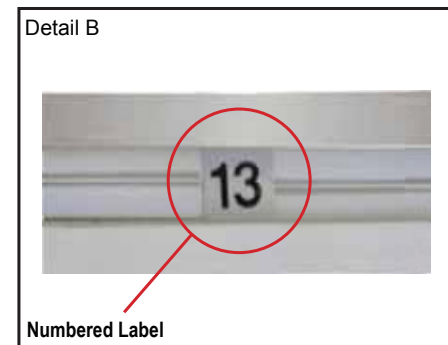


Each extrusion contains a numbered label which corresponds with setup instructions. The label is located within a groove of the extrusion (when possible). With extrusion components the labels contain Black numbers unless otherwise specified.



Remove only (1) setscrew when disassembling. Replace setscrew in extrusion after assembling it. Before packing, replace setscrew in extrusion to avoid losing it.

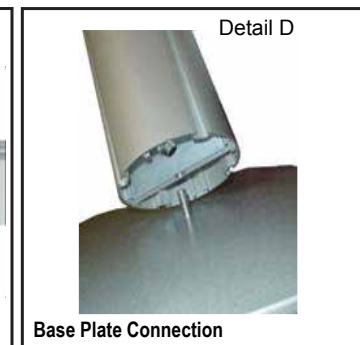

Attach base plate to round or square vertical extrusion using the bolt provided. Be careful not to strip the threads.

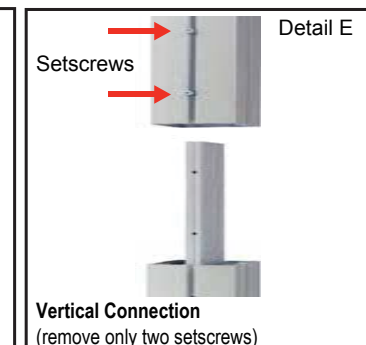



When vertical extrusions are packed in portable cases rather than crates or tubs, they must be broken down into smaller sections which then require assembly.

Remove only (2) setscrews when disassembling. Replace setscrews in extrusion after assembling it. Before packing, replace setscrews in extrusion to avoid losing them.

Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

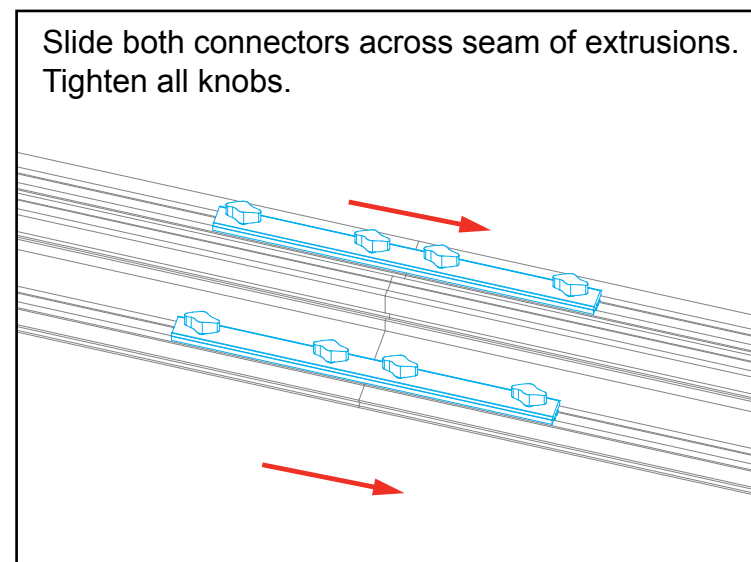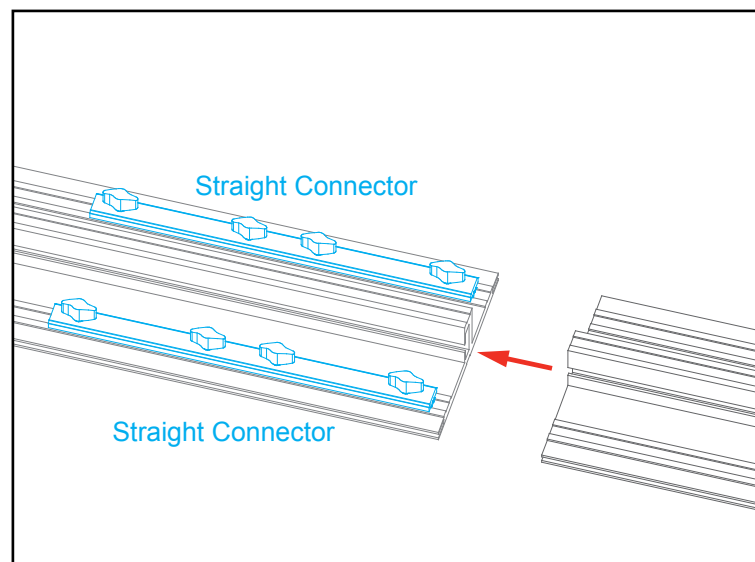

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

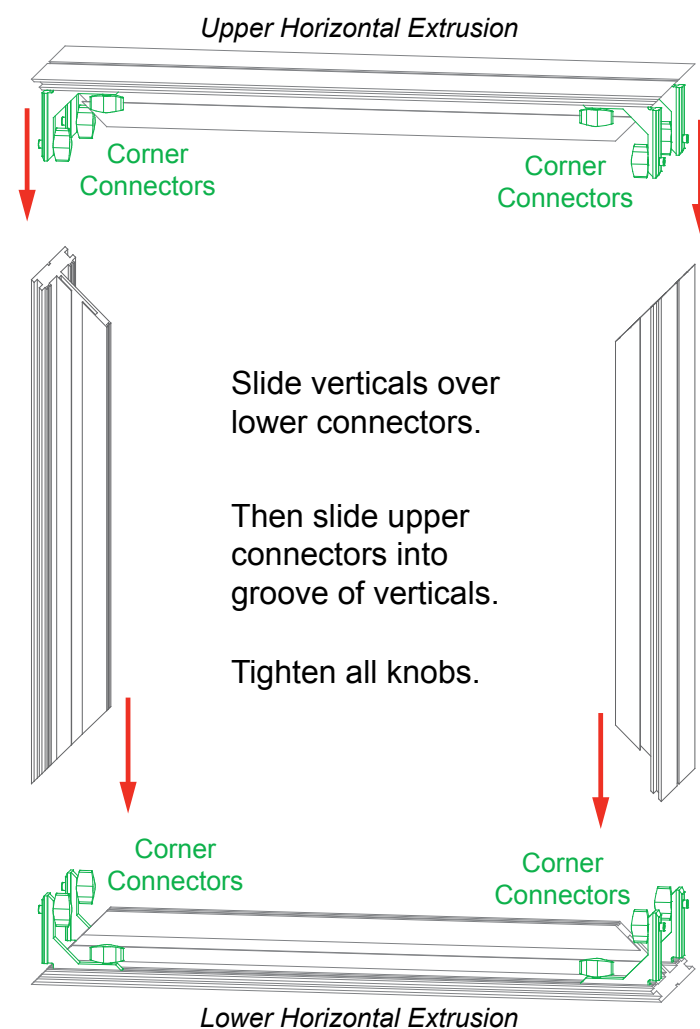


Adjust connectors if necessary to prevent gaps in connection.

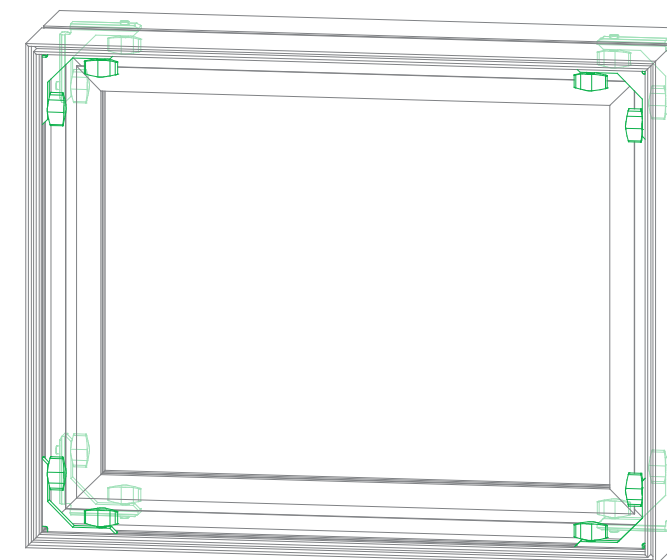

COMPLETED ASSEMBLY

All knobs must be tightened securely to ensure a proper connection.


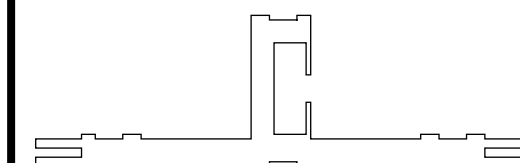


CEI152 Profile

Straight Connection

When assembling frame, first attach all **straight connectors**, then attach **corner connectors**.

- 1) Place extrusions end-to-end.
- 2) Loosen all knobs, then slide **straight connectors** across the seam of extrusions.
- 3) Tighten all knobs to secure connection.

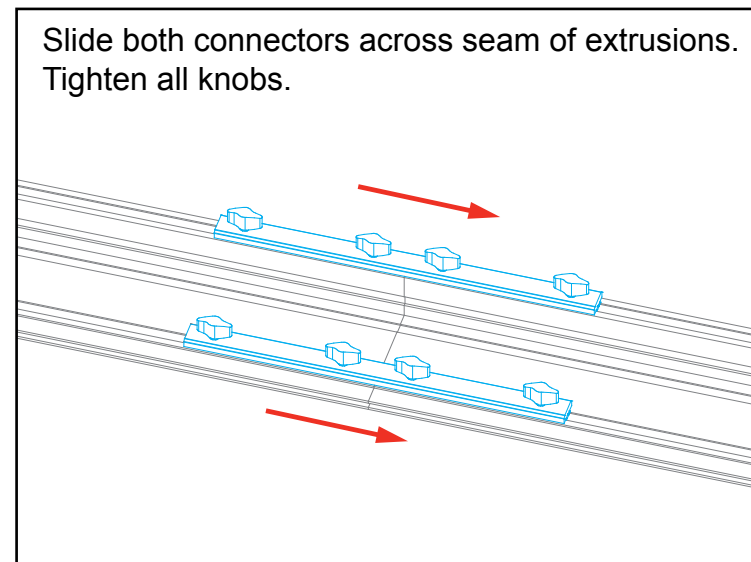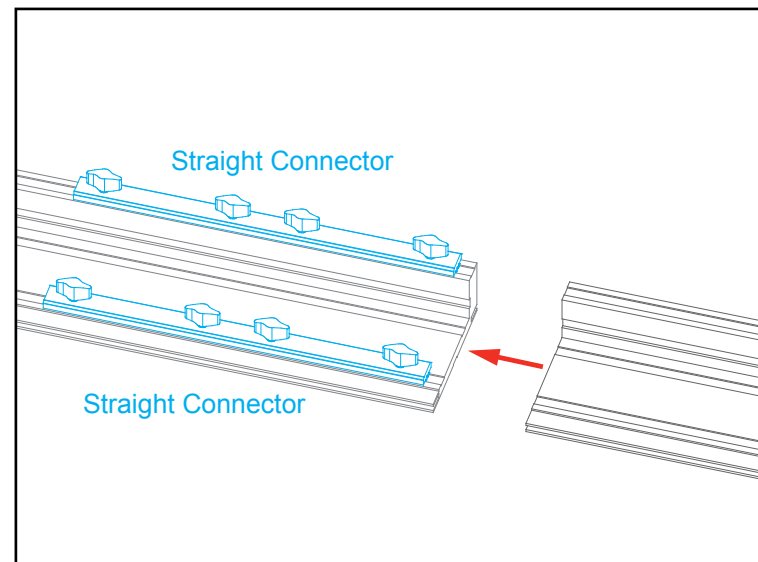

All knobs must be tightened securely to ensure a proper connection.

Disassembly

- 1) Loosen all knobs.
- 2) Slide connectors off of one extrusion.
- 3) Tighten knobs to prevent loss during packing & shipping.


Keep straight connectors in groove of extrusion. Do not remove connectors during disassembly.

Corner Connection


- 1) Loosen knobs, then slide vertical extrusions onto **corner connectors** of **lower** horizontal extrusion.
- 2) Slide **corner connectors** of **upper** horizontal extrusion into grooves of vertical extrusions.
- 3) Tighten all knobs to secure connection.

Disassembly

- 1) Loosen knobs on vertical extrusions.
- 2) Slide the vertical extrusions off of **corner connectors** on lower and upper horizontal extrusions.

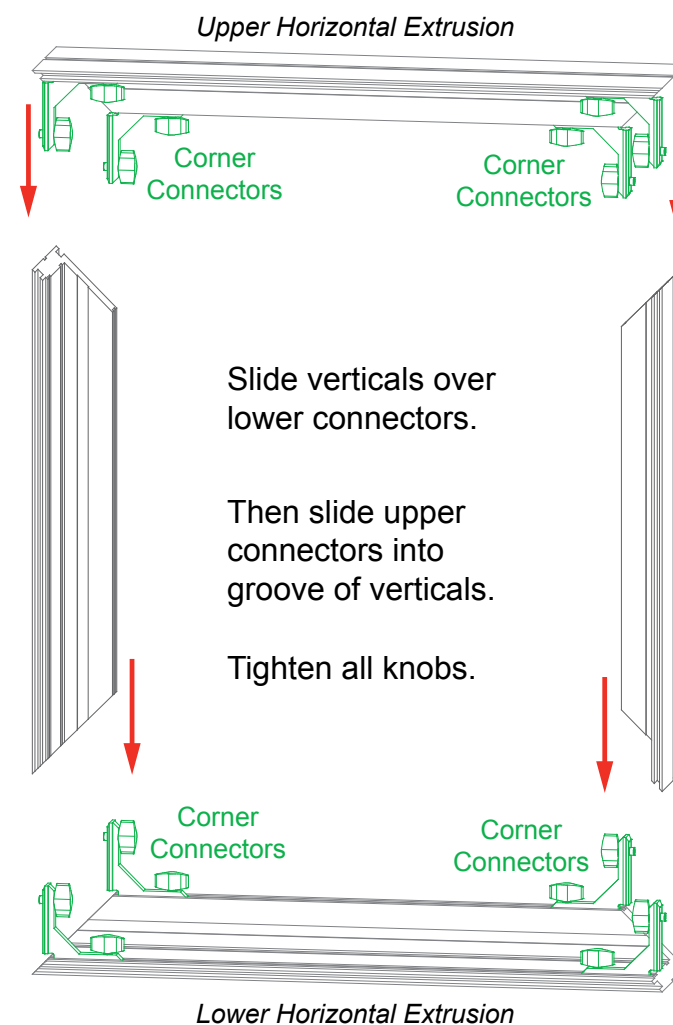


Adjust connectors if necessary to prevent gaps in connection.

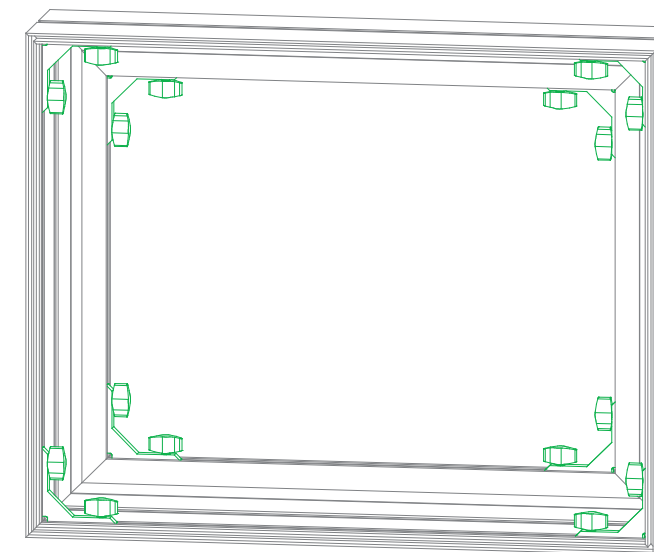


COMPLETED ASSEMBLY


All knobs must be tightened securely to ensure a proper connection.

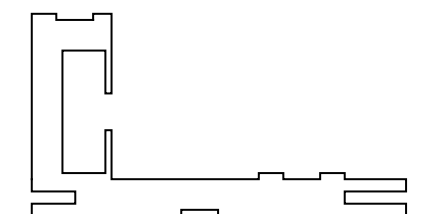

CEI110 Profile

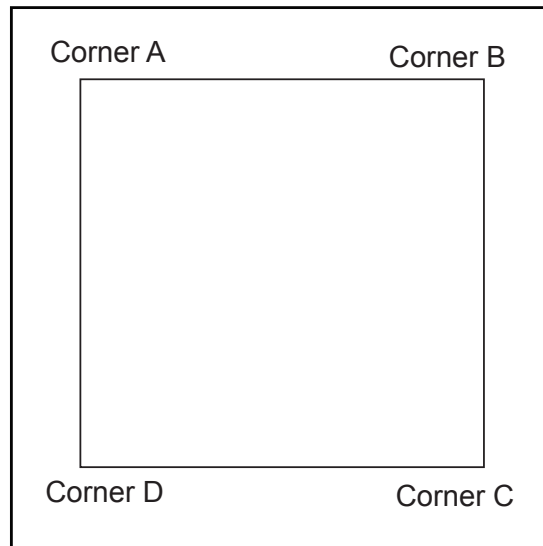

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.

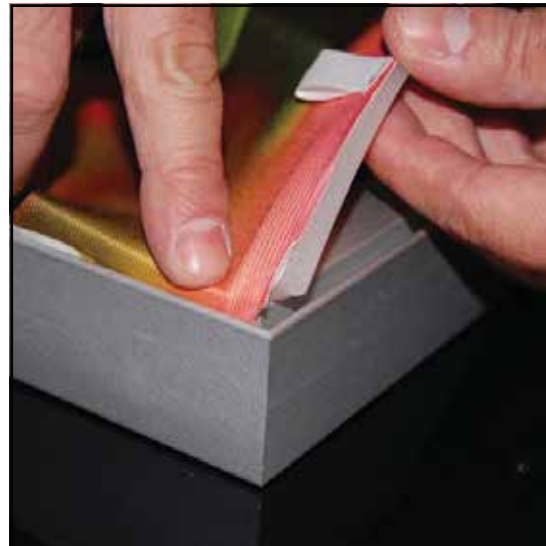

Step 1
Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.




Step 2
Repeat Step 1 for opposite corner C, then insert corner D, to complete the installation of the corners.



Step 3
Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

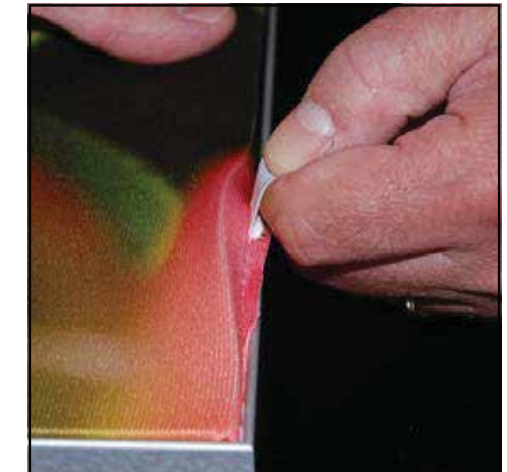

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.





CRATE PACKING

Item	Qty.	Description
1	1	96" h CEI152 Vertical Extrusion
3	1	96" h CEI152 Vertical Extrusion
5	1	56" w CEI152 Horizontal Extrusion
6	1	56" w CEI152 Horizontal Extrusion
7	1	56" w Z140 Horizontal Extrusion
8	2	Base Plate
--	1	U-Channel


Steps:

Refer to the CEI152 Frame Assembly general information page.

- 1) Attach U-Channel to lower horizontal. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [1,3] between horizontals [5,6] using corner connectors.
- 3) Attach horizontal [7] between verticals [1,3].
- 4) Connect Base Plates [8] to underside of horizontal [5].
- 5) Connect power cords to Supernova lights; place transformers into U-channels.

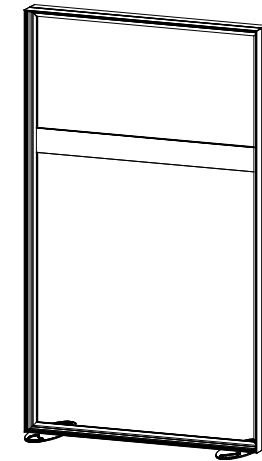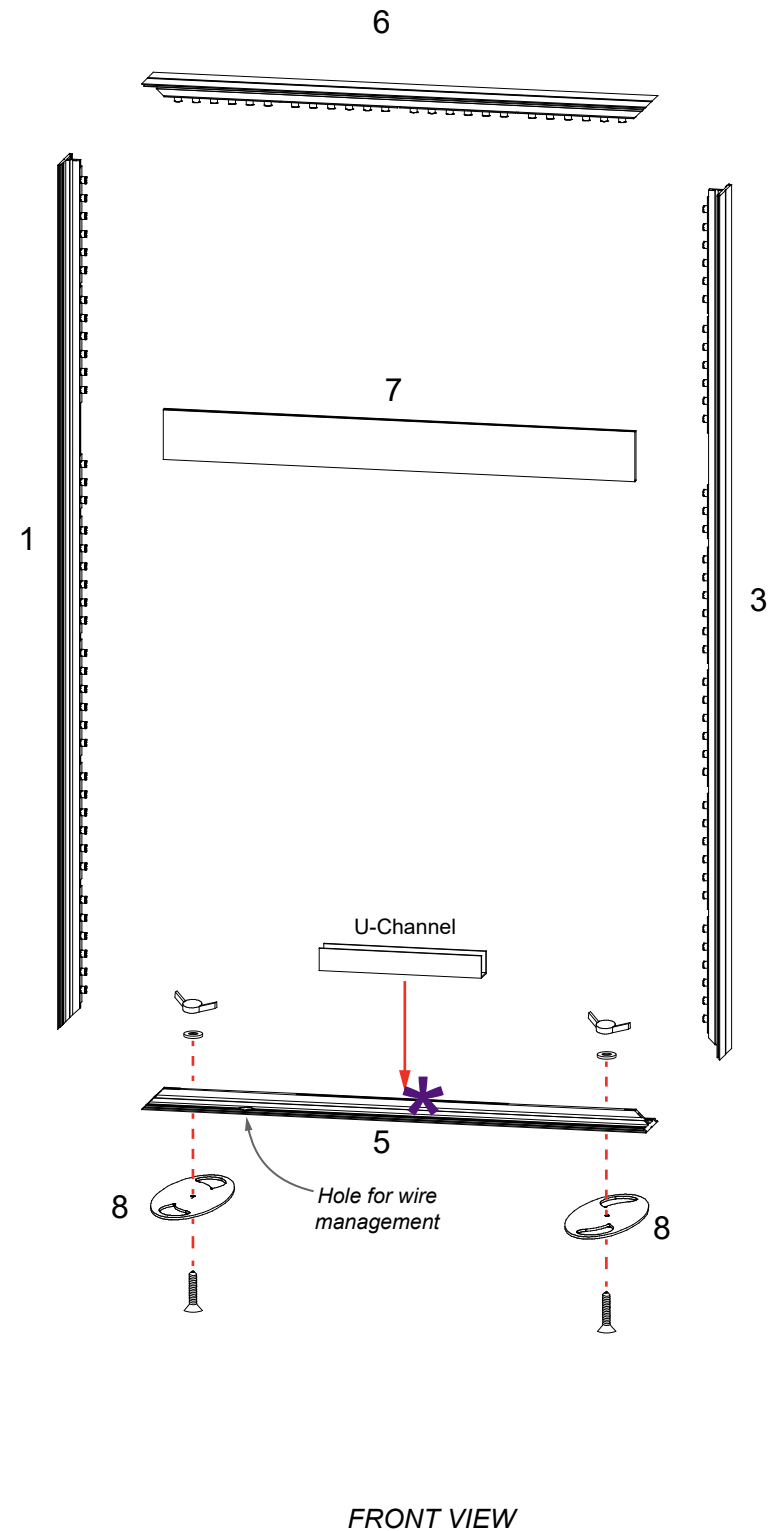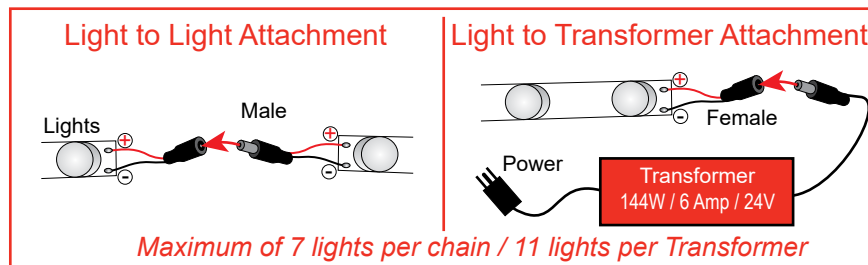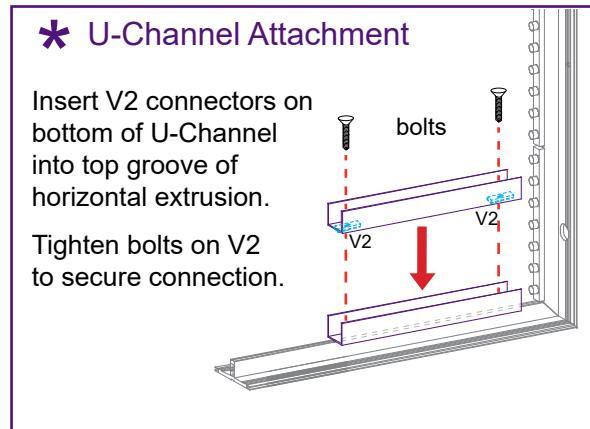

When assembled

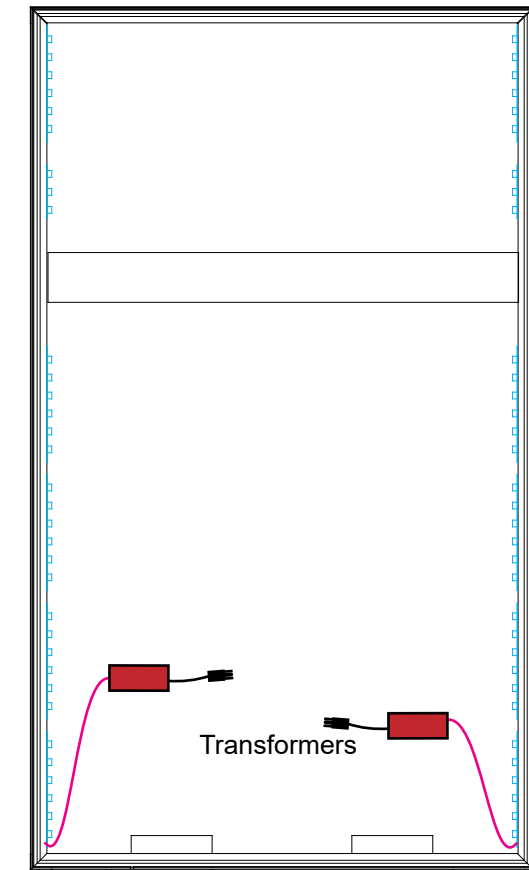


ELEVATION VIEW

Item	Qty.	Description
13	1	96"h CEI152 Vertical Extrusion
14	1	96"h CEI152 Vertical Extrusion
15	1	46"w CEI152 Horizontal Extrusion
16	1	46"w CEI152 Horizontal Extrusion
17	1	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the CEI152 Frame Assembly general information page.


- 1) Install U-Channel to horizontal [15]. See [U-Channel Attachment](#) detail.
- 2) Connect verticals [13,14] between horizontals [15,16].
- 3) Install Base Plate [17] to bottom of horizontal [15], using bolt & wing nut.
- 4) Connect power cords to Supernova lights as shown.

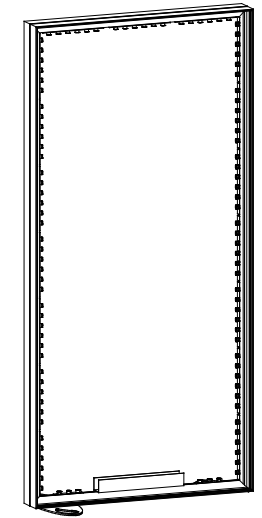


When assembled

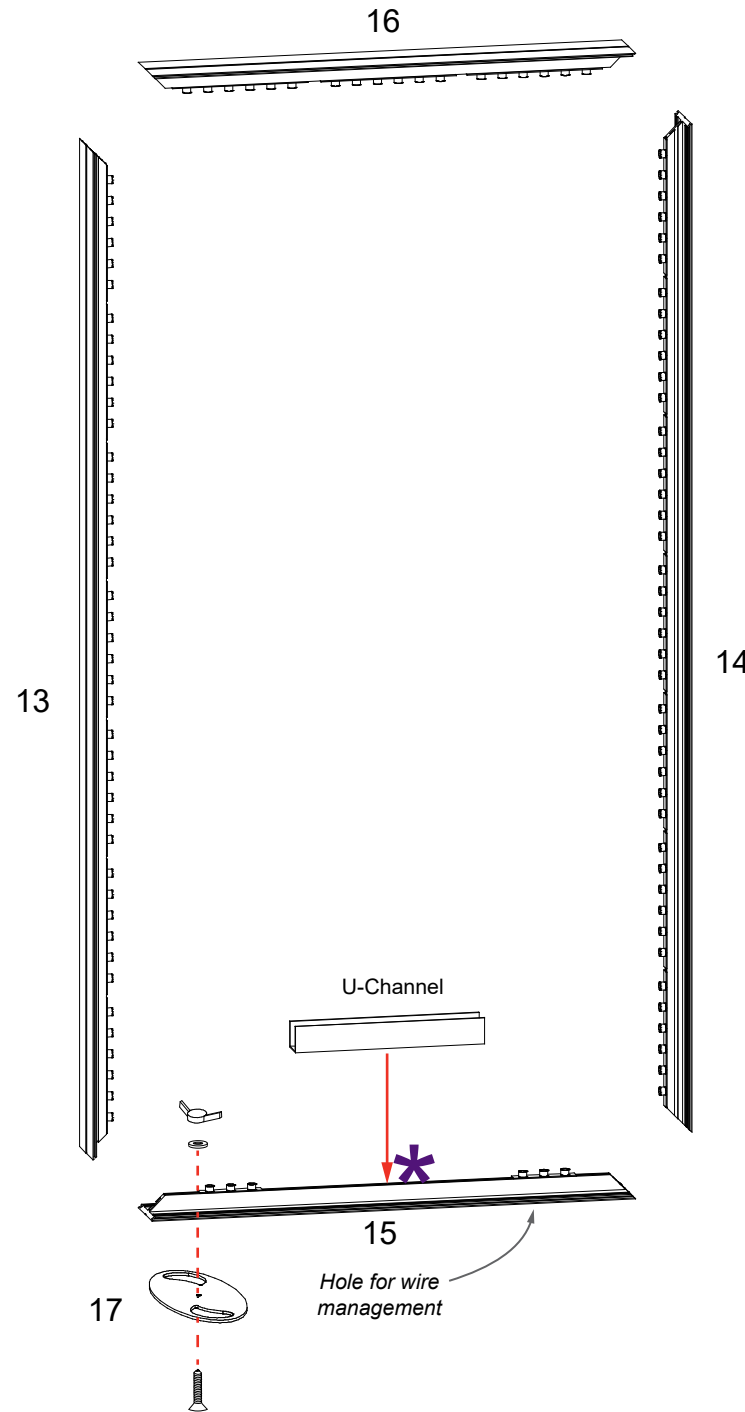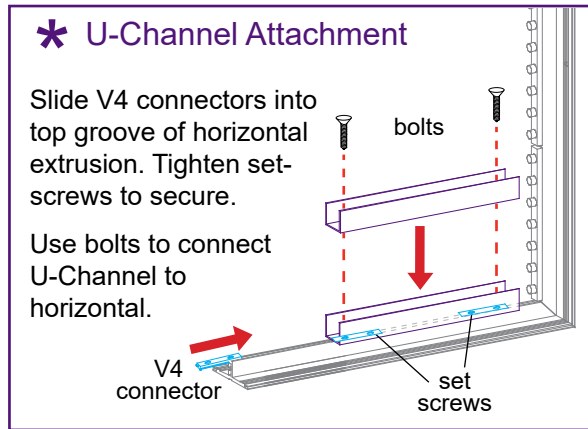

AS VIEWED FROM INSIDE THE BOOTH

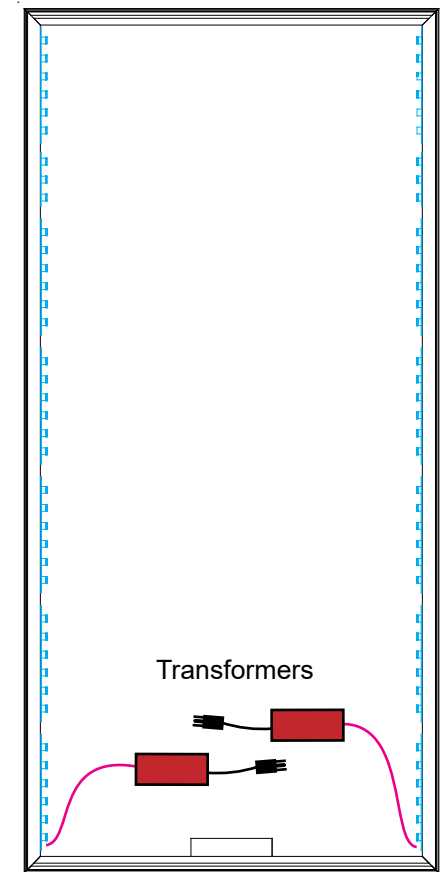

ELEVATION VIEW

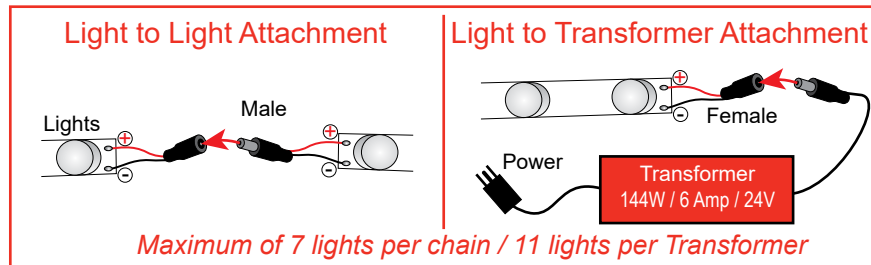


Item	Qty.	Description
18	1	96"h CEI152 Vertical Extrusion
19	1	96"h CEI152 Vertical Extrusion
20	1	46"w CEI152 Horizontal Extrusion
21	1	46"w CEI152 Horizontal Extrusion
22	1	8" x 22" Base Plate
--	2	U-Channel



Steps:

Refer to the CEI152 Frame Assembly general information page.


- 1) Install U-Channel to horizontal [20]. See U-Channel Attachment detail.
- 2) Connect verticals [18,19] between horizontals [20,21].
- 3) Install Base Plate [22] to bottom of horizontal [20], using bolt & wing nut.
- 4) Connect power cords to Supernova lights as shown.

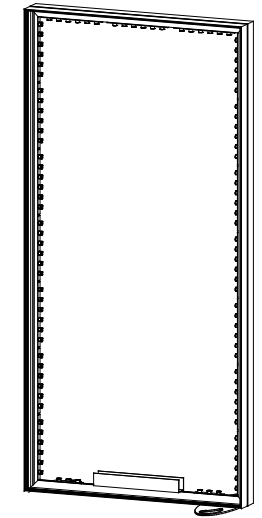


When assembled

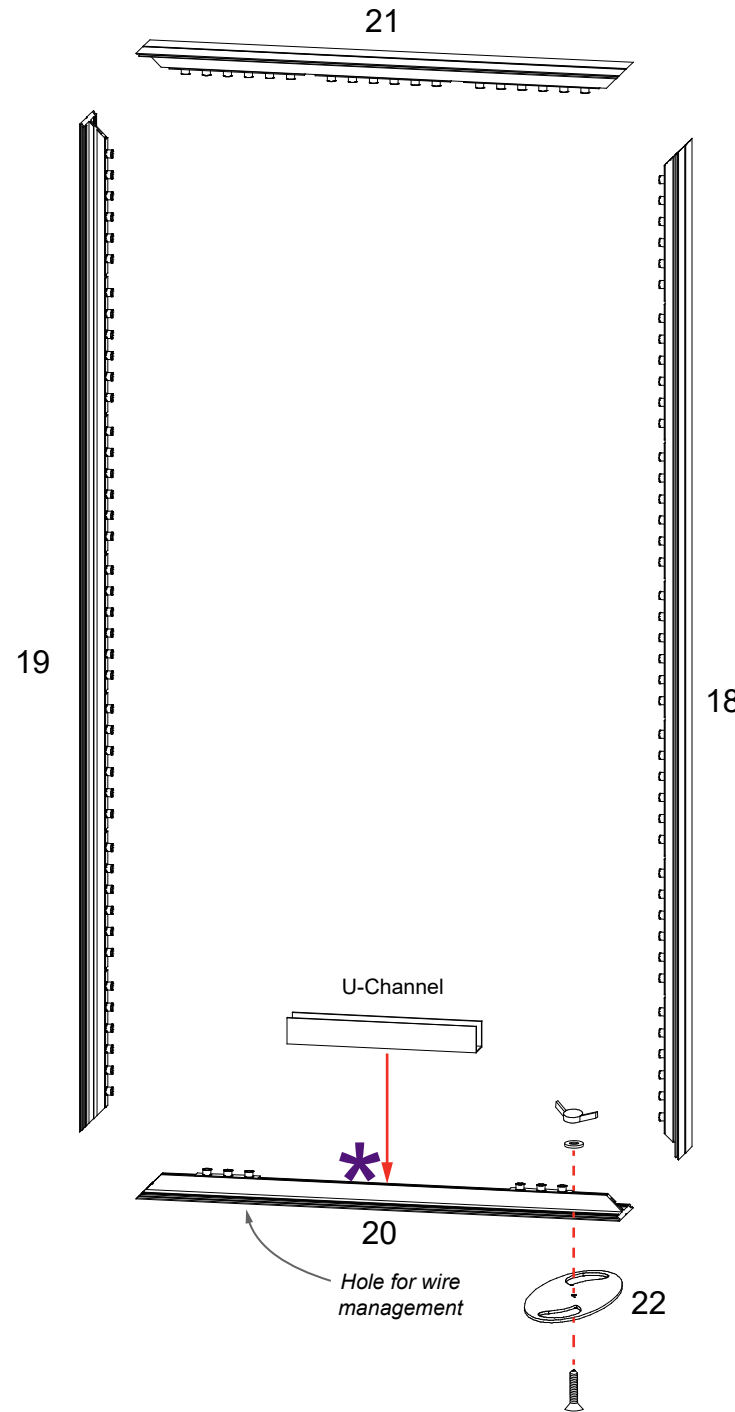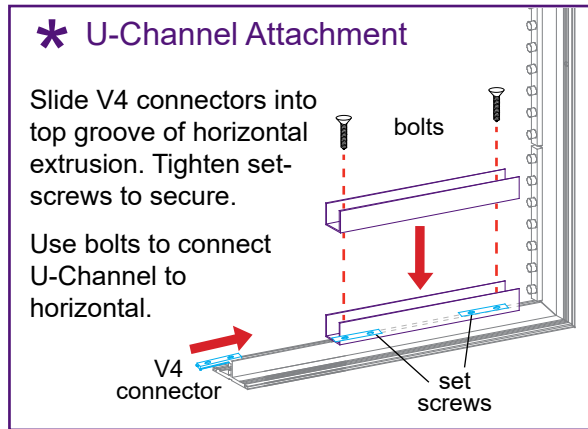

AS VIEWED FROM INSIDE THE BOOTH

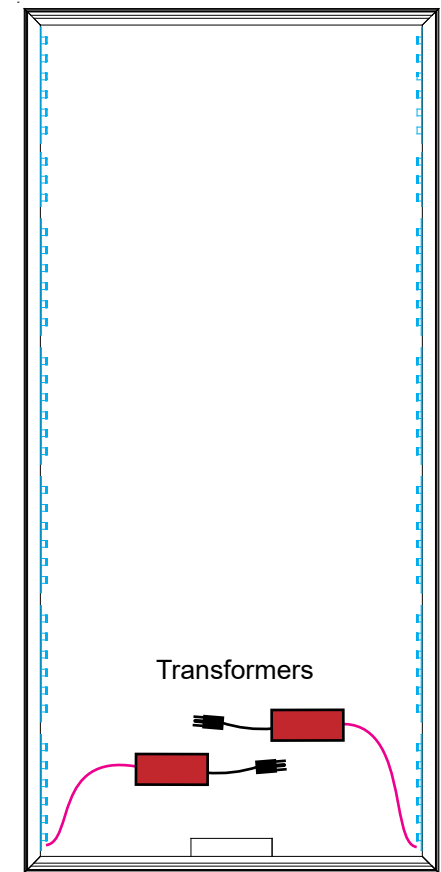



ELEVATION VIEW

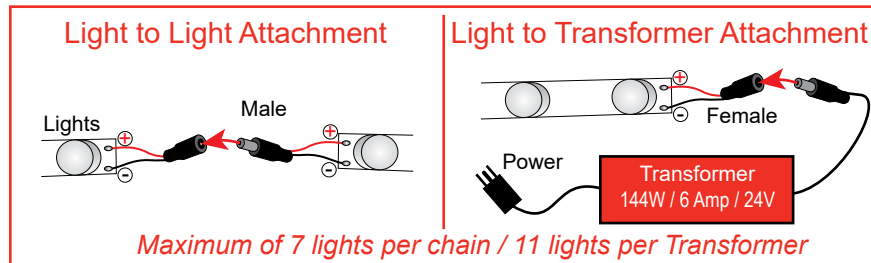

Item	Qty.	Description
9	2	96" h RSG540 Vertical Extrusion
10	4	19.722" w Z41 curved Horizontal Extrusion
17,22	1,1	Base Plate

Steps:


- 1) Connect **Infills** between frame assemblies as shown, using A10 clamps. See **A10 Attachment** detail.
- 2) Attach Base Plates [17,22] to bottom of verticals [9].
- 3) Assemble horizontals [10] between verticals [9,13] & [9,18], inserting **Infill**.

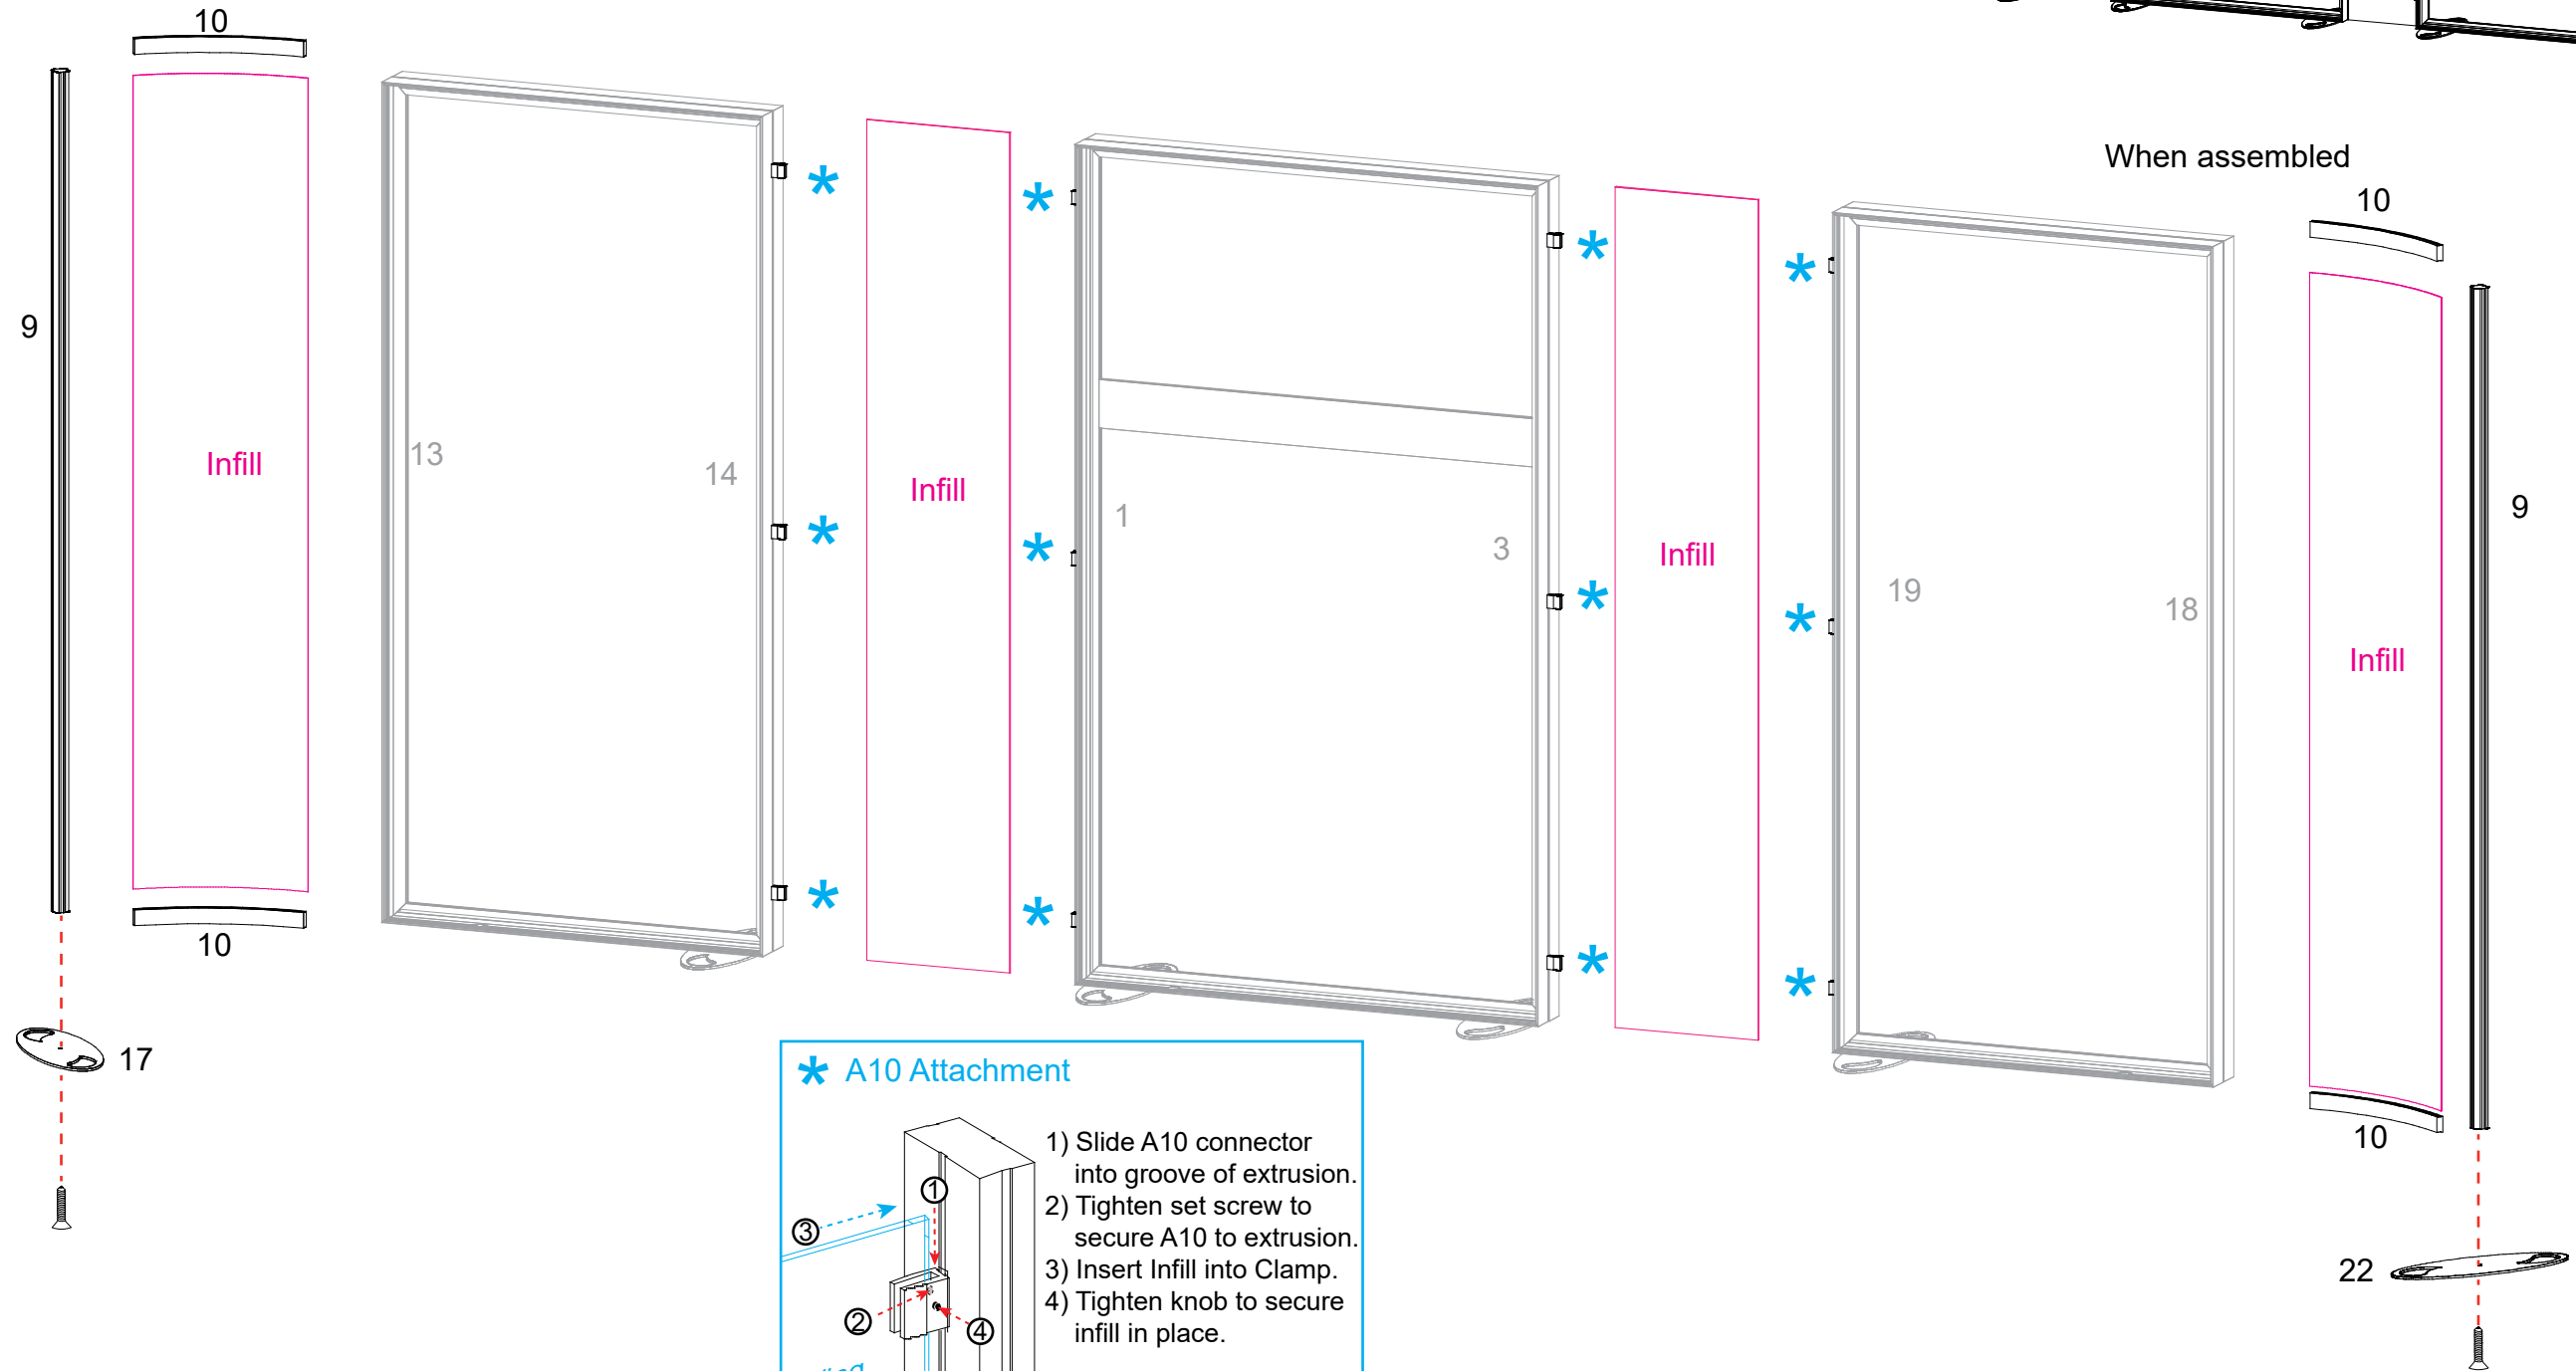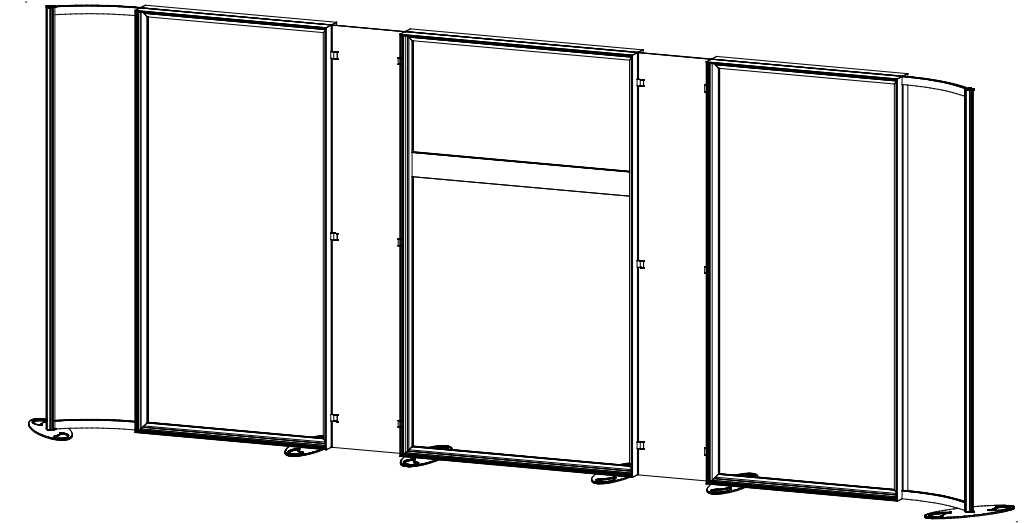

*** Monitor Mount Attachment**

Attach Stand-off Barrels to horizontal extrusion using wing nuts.

Install Monitor Mount to Stand-off Barrels using bolts.

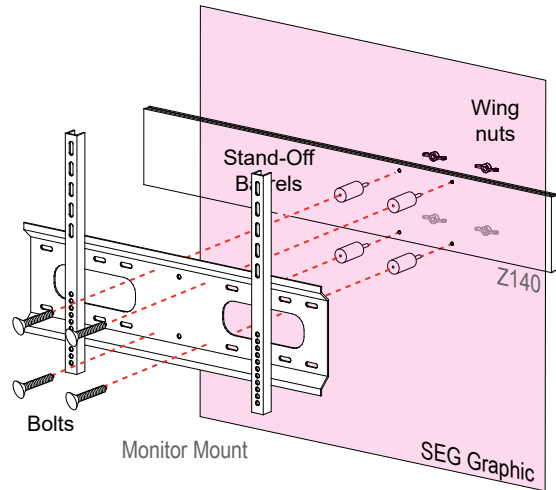


Note: Monitor mount installs over SEG graphic.


Steps:

Refer to the SEG Installation general information page.

- 1) Apply SEG Graphics to lightbox frames.
- 2) Connect Monitor Mount to horizontal [7].
See **Monitor Mount Attachment** detail.





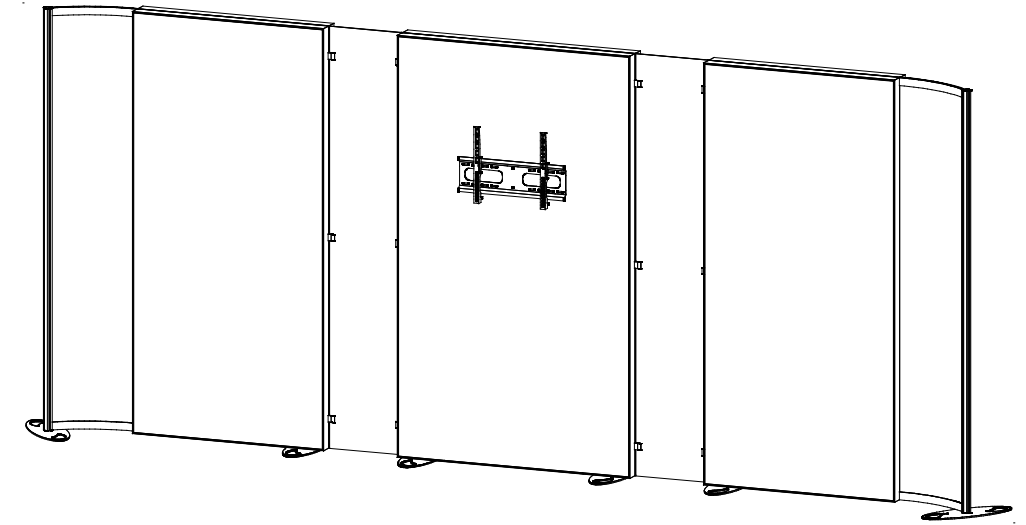


Completed Assembly

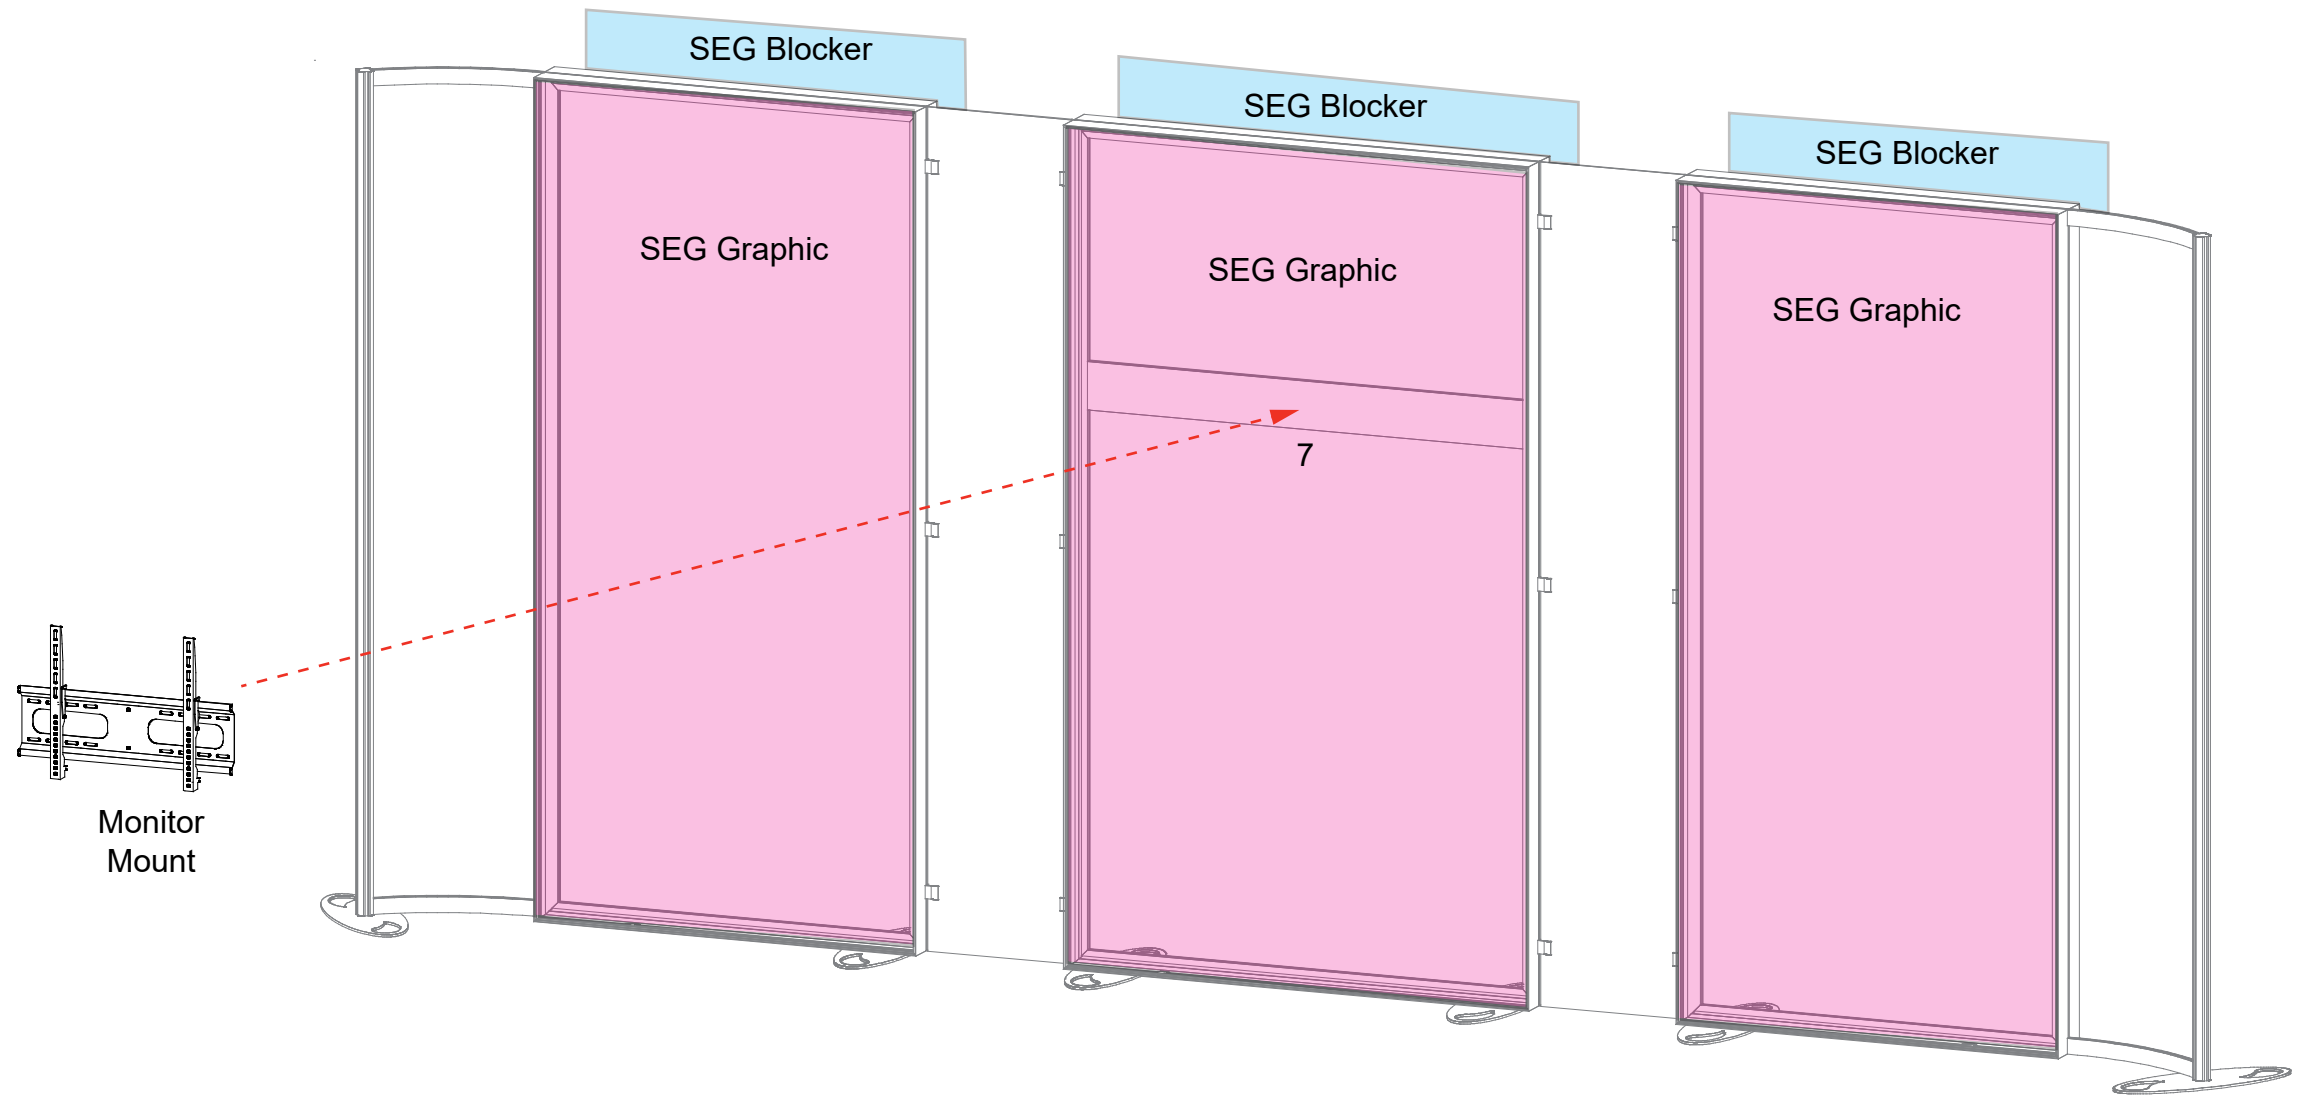

Item	Qty.	Description
1/2	1/1	30.5"h CEI110 Vertical Extrusion
3/4	1/1	46"w CEI110 Horizontal Extrusion

- Steps:**
- 1) Connect horizontals [3,4] between verticals [1,2], sliding backer panel between verticals. See [CEI-110 Corner Connection](#) detail.
 - 2) Attach left & right cabinets to frame assembly [1/2/3/4] using bolts & wing nuts.
 - 3) Install [Counter Top](#) to assembly using standoff barrels. See [Standoff Barrel Attachment](#) detail.
 - 4) Connect power cords to Supernova lights as shown.
 - 5) Apply SEG graphic to frame.
- Refer to the [SEG Installation general information page](#).

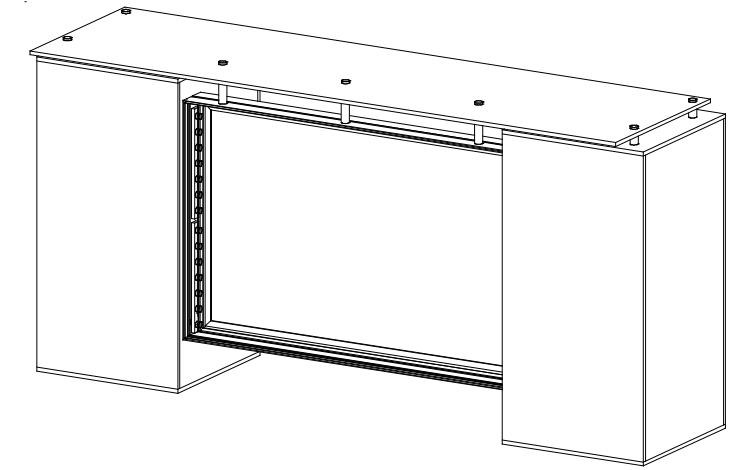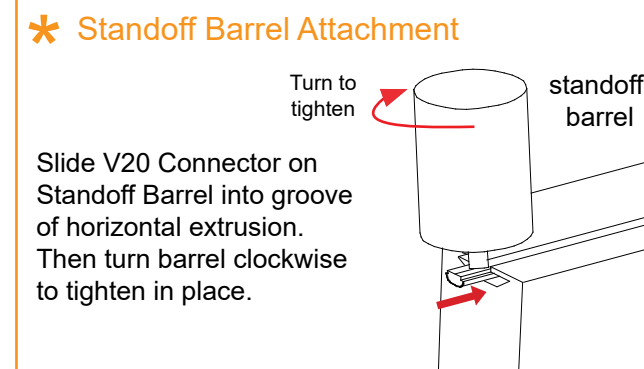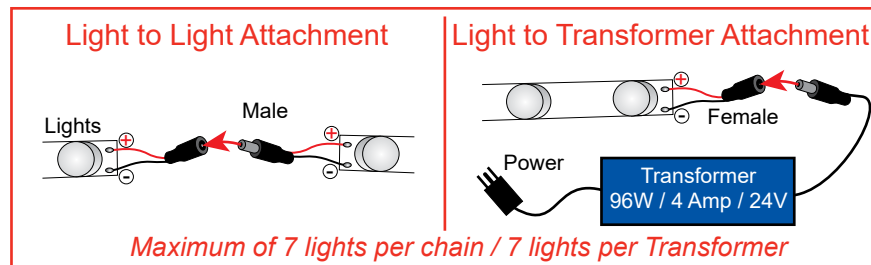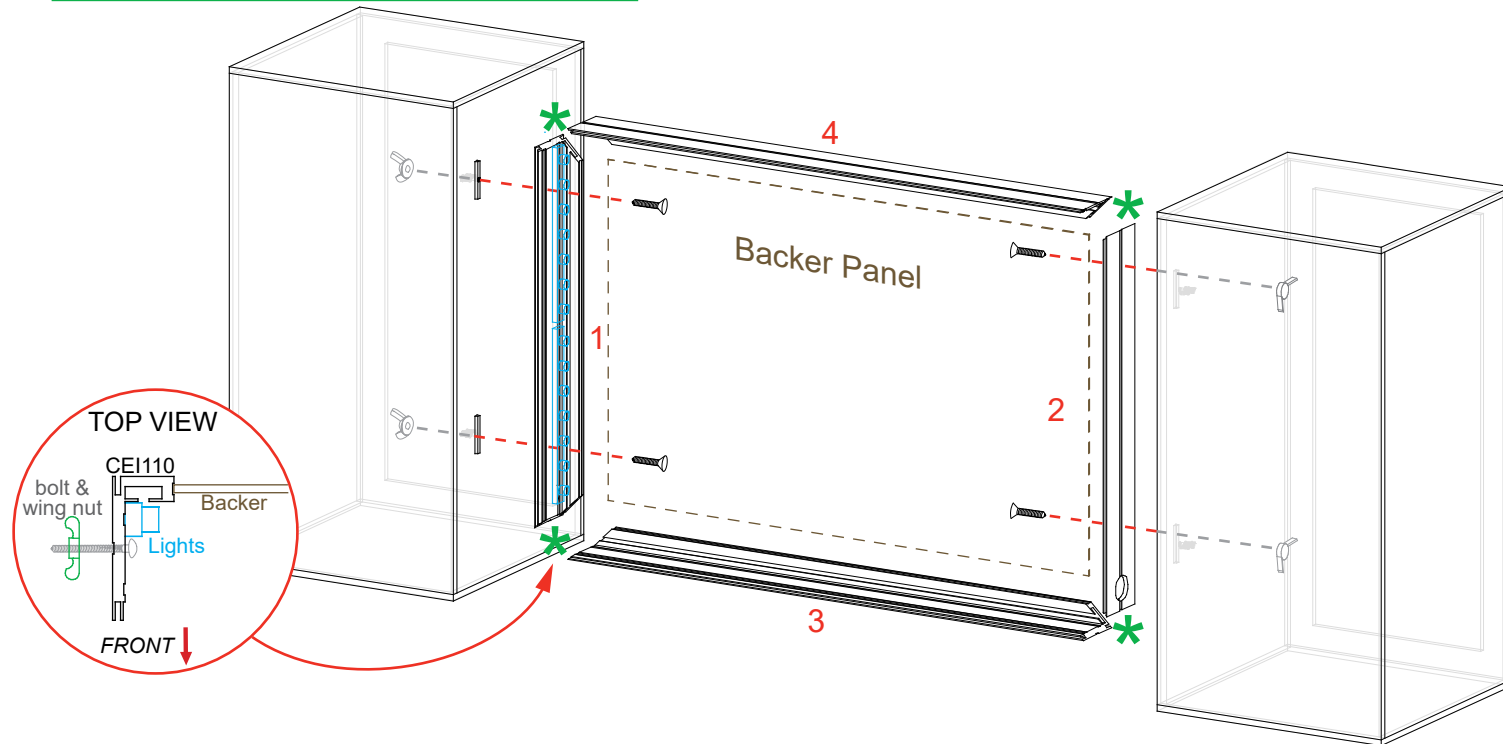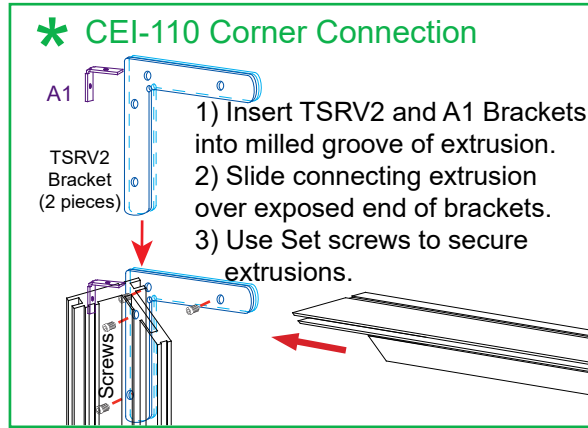

When assembled

